

Ref. No	Function Code	Part Name
1	50100-BDN0-E000	frame
2	50120-BDH0-0000	right bumper
3	50131-BDH0-0000	right rear tube
4	50110-BDH0-0000	left bumper
5	82101-BDN0-0000	rear storage components
6	50130-BDH0-0000	left rear tube
7	50195-BDE0-0000	left front fender
8	50196-BDE0-0000	right front fender
9	50198-BDE0-0000	right rear fender
10	50197-BDE0-0000	left rear fender
11	50199-BDH0-0000	front cover
12	50170-BDH0-0000	front defence board
13	50200-BDE0-0000	top
14	88131-BDH0-0000	rear protection net
15	88110-BDE0-E000	right rearview mirror
16	88120-BDE0-E000	left rearview mirror
17	89330-BCC0-0000	steering wheel belt
18	53260-BDN0-0000	steering wheel turning axle

 


Ref. No	Function Code	Part Name	Reqd. No.
1	4520A-BDN0-0000	Brake pump assembly	1
2	53100-BDA0-0000	steering wheel	1
4	53210-BDH0-0000	redirector	1
5			
6	53250-BCA0-0000	dustproof cover	2
7	53220-BCA0-0000	gimbal	2
8	5324A-BDN0-0000	link pole	2
9	5331A-BDE0-0000	throttle footplate subassembly	1
10	53330-BDE0-0010	throttle handspike	1
11	5332A-BCA0-0002	brake pedal subassembly	1
12	45536-BCA0-0010-0C	main pole	1
13	53331-BCA0-0000	damping ring	4
14	53392-BCA0-0000	brake pole spring	1
15	53394-BCA0-0000	throttle pole spring	1
16	53350-BDE0-0000	accelerator pedal rubber	1
17	53351-BDE0-0000	brake pedal rubber	1
18	24850-BDN0-0000	Shift Rod assembled	1
19	23410-178-0010	shifts gears handle	1
20			
21			
22	43450-BDN0-0000	handbrake line	1
23	53180-BDA0-0010	handbrake handle	1
24	17910-BDN0-0000	gun line	1
25		Front brake pad	2
26		Rear brake pad	2
27	23021-178-0000		1
28	23403-178-0000		1


29	45201-BDN0-0000		1
	53181-BDN0-0000		1



Ref. No	Function Code	Part Name	Reqd. No.
1	51400-BDH0-0000	front shock absorber	2
2	50752-BDN0-0000	right steering knuckle assembly	1
3	5140A-BDN0-0000	SUSPENSION ARM COMP, LOWER, RIGHT	1
4	5130A-BDH0-0000	SUSPENSION ARM COMP, UPPER, RIGHT	1
5	5110A-BDH0-0000	SUSPENSION ARM COMP, UPPER, LEFT	1
6	5120A-BDN0-0000	SUSPENSION ARM COMP, LOWER, LEFT	1
7	50751-BDN0-0000	left steering knuckle assembly	1
8	44710-BDN0-E000	front tyre27X8-14	2
9	44705-BDN0-0000	Front wheel hub(aluminum)6-14	2
10	41006-BDN0-0000	Intermediate drive shaft	1
11	41001-BDN0-0000	left front transmission shaft	1
12	27200-178-0000	Front axle assembly	1
13	41002-BDN0-0000	right front transmission shaft	1
14	41003-BDN0-0000	left rear transmission shaft	1
15	26200-178-0000	rear axle assembly	1
16	41004-BDN0-0000	right rear transmission shaft	1
18		suspension Knuckle	2

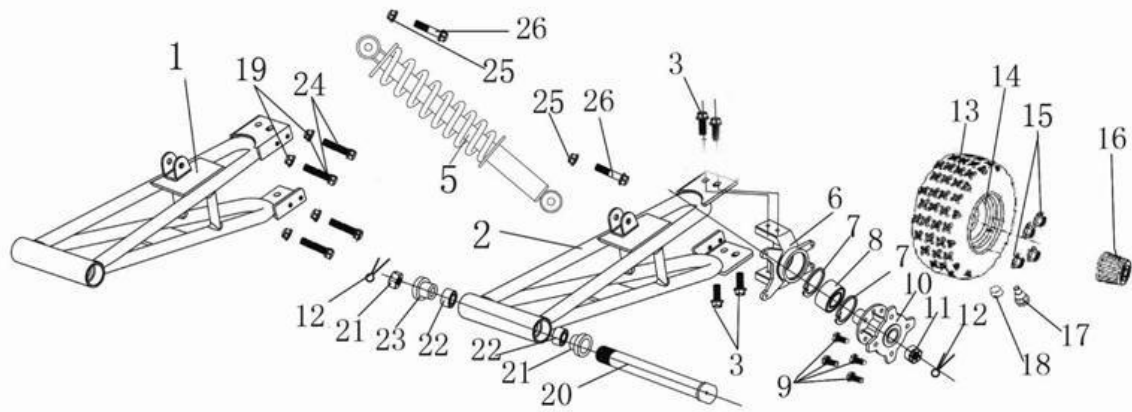

Function Code	Part Name	Reqd. No.
5160A-BDH0-0000	right rear suspension arm assembly	1
5150A-BDH0-0000	left rear suspension arm assembly	1
90140-10025-1B	hexangular flange bolt	8
52400-BDH0-0000	rear shock absorber	2
52500-BDF0-0000	rear elevation	2
94140-72B01-0C	Hole Spring Collar	4
96100-377237		2
44901-BCA0-0000-0C	Spoke round plate bolt installation	8
4260A-BDF0-0010	rear wheel hub	2
41000-BDF0-0000-01	hexangular slotted Nut	2
94200-32320-0C	open pin	4
42710-BDN0-E000	rear tyre 27X10-14	2
42705-BDN0-0000	rear tyre (aluminum) 8-14	2
44900-BCA3-0000-0D	Gai-Nut	8
42706-BDH0-0000	rear axle cover	2
42753-BCA0-0000	valve	2
42754-BCA0-0000	valve cap	2
94010-08B01-0C	hexangular nut	8
53123-BDF0-0000	Cradle installation axis	2
51310-BDF0-0000-0C	rear Rocker bush	4
96100-30203	axletree	4
90292-BCA0-0000-0C	hexangular slotted Nut I	2
96050-08035-1B	hexagonal bolts	4
90210-10B01-2B	hexangular flange locknut	4
90140-10050-1B	hexangular flange bolt	4

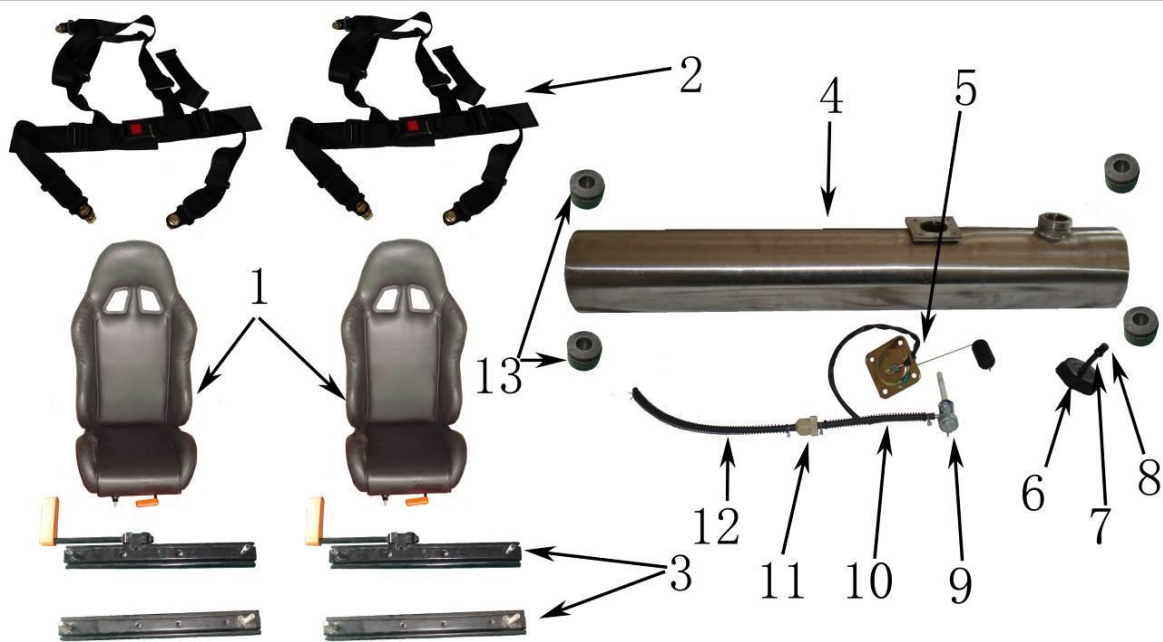 


Ref. No	Function Code	Part Name	Reqd. No.
1	77210-BDH0-0000	seat	2
2	77220-BCC0-E000	safety belt	2
3	77250-BDH0-0000	slip rail	2
4	17510-BDN0-0000-00	oil box	1
5	17511-BDH0-00000	oil level sensor	1
6	17620-BCC0-0002	oil box cover	1
7	17685-BCA0-0001	lead flow tube	1
8	17686-BCA0-0000	check valve	1
9	16950-BDE0-0000	oilbox switch	1
10	16502-178-0000	oil pipe I	2
11	16020-1780-0000	filter	1
12			
13	17518-BCA0-0000	Tank rubber ring	
14	19600-1780-0000	oil cooler parts	1
15	19801-BDN0-0000	rubber tube $\Phi 17 \times \Phi 10 \times 1500$	2
16	16950-BDN0-0000	pump assembly	1



Ref. No	Function Code	Part Name	Reqd. No.
1	50334-BDE0-0000	front decorative cover	1
2	50201-BDH0-0000	Electrical panels	1
3	32100-BDN0-E000	main assistant cable	1
4	38110-BCA0-E000	bugle	1
5	38300-BCA0-E000	flash apparatus	2
6	37920-058-0000	assistant relay	3
7	33701-BDH0-E000	taillight	2
8	33450-BDH0-E000	rear turn around light	2
9	33741-BCA0-E000	Reflector apparatus	2
10	33450-BDH0-E000	front turn around light	2
11	33200-BCA0-E010	License plate light	1
12	33120-BDH0-E000	front headlight	2
13	33130-BDH0-E000	front headlight	2
14	33400-BDH0-E000	diversion cable 2W-4W	1
15	32400-BDH0-E000	assistant cable	1
16	32100-178-0000	Rectifier	1
17	CF188-153000	Smoke light	1
18	38500-BCA0-0000	Start relay	1
19	33110-178-0000	ignition loop	1
20	3520A-BDE0-E000	Changes optical switch	1
21			
22	50330-BDH0-0000	Electric appliances box top	1
23	50320-BDH0-0000	battery cover	1
24	31500-BDN0-0000	battery	1
25	50328-BCA0-0000	battery mat	1
26	37500-BDN0-E000	speedometer	1
27	37320-178-0000	switch2W-4W	1

28	35900-BDE0-0000	Smoke light	1
29	3510A-BDH0-0000	Assembled switch	1
30	35100-BCA0-E000	Ignition lock	1
31		Accelerator cable	1
32	50329-BDE0-0000	spring piece of battery	1
	3530A-BDL0-0000	Electric start switch	1
	32400-BDN0-E000	EFI cable	1
	37919-058-0000	Circuit relay combination	2
33	33102-178-0000	High-voltage	2

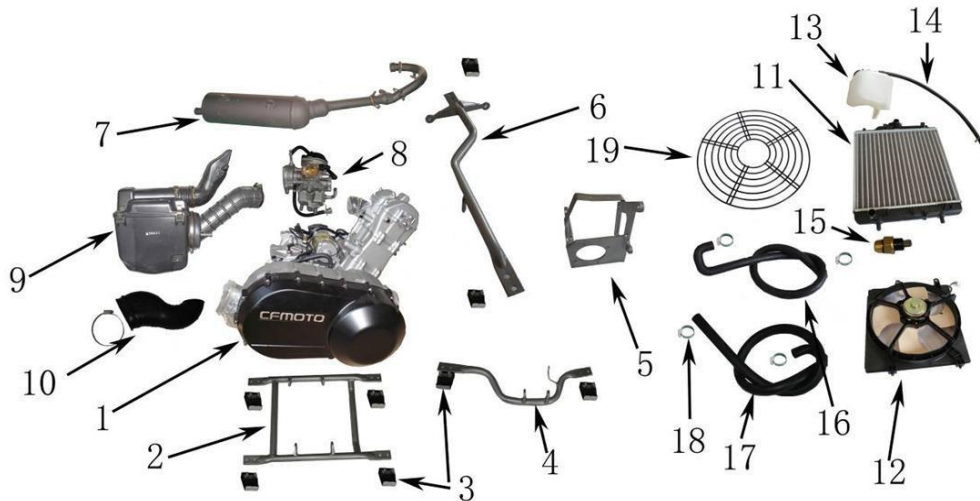 

Ref. No	Function Code	Part Name	Reqd. No.
1	00000-178-0000	engine light machine	1
2	52251-BDN0-0000	engine installation frame	1
3	52154-BDA0-0000	Engine steeve buffer block	8
4	19010-BDH0-0000	Radiator	1
5	19020-BDH0-0000	fan fender	1
6	19010-BDL0-0000	oil cooler	1
8			
10	19032-BDH0-0000	fan engine	1
11	37752-BDN0-0000	water tempreture sensor	1
12	37751-SBH0-0010	heat reflect switch	1
13	19100-SBH0-0000	assistant water tank(with cover)	1
14	19507-BDE0-0000	assistant water tank pipe	1
16	19501-BDH0-0010	upper water pipe	1
17	19502-BDH0-0010	lower water pipe	1
18	11263-SCC0-2000	hoop(25-35)	8
19	88131-BDH0-0000	rear protection net	1
20	33500-178-0000	EFI controler parts (ECU)	1
4	18110-178-0000	exhaust tubesI	1
4	18150-178-0000	exhaust tubesII	1
12	18001-178-0000	exhaust port pad	6
5	18106-178-0000	Spherical exhaust pipe gasket	6
24	1830A-BDN0-E000	exhaust muffler assembly	1
6	17100-178-0000	air filter parts	1
7	33110-178-0000	Ignition coil combination	2